



ART THATCH™

Palapa Structures
5390 E Los Angeles Ave. Unit B
Somis, CA 93066
Phone: (805) 386-0306
www.PalapaStructures.com
info@palapastructures.com

Easy Installation!

- ▶ Ideal for installation on all solid roof designs.
- ▶ Realistic, artificial reed thatch panels conform and adjust to any custom roof design.
- ▶ Install our Zulu Reed™ Top Cone (sold separately) on any custom roof peak.
- ▶ Starter Panels are used to cover the linear eaves of your custom thatched structure.



Zulu Reed™ Thatch Starter and Sub-Panel

Specifications


- Width: 31"
- Height: 18.5" (11" for Starter)
- Coverage: 1.5 Sq. Ft.
- Center Installation: 7"
- 20 Year Limited Warranty
- Offered as both Class A fire rated and non-fire rated



Zulu Reed™ Thatch Starter and Sub-Panel Installation Tips


Waterproof Installation

- On a solid roof, panels are not visible from underneath.
- Best to use 30 degree roof pitch.
- Use waterproof underlayment under panels.
- Attach with galvanized or stainless screws, roofing nails or pneumatic staples.
- Starter panels are used for the first row across the bottom or eave.
- Panels should have an overhang at the bottom or eave of 8-12".
- Cut with razor knife or saw (hacksaw, jigsaw, sawzall) with an 18 TPI blade.

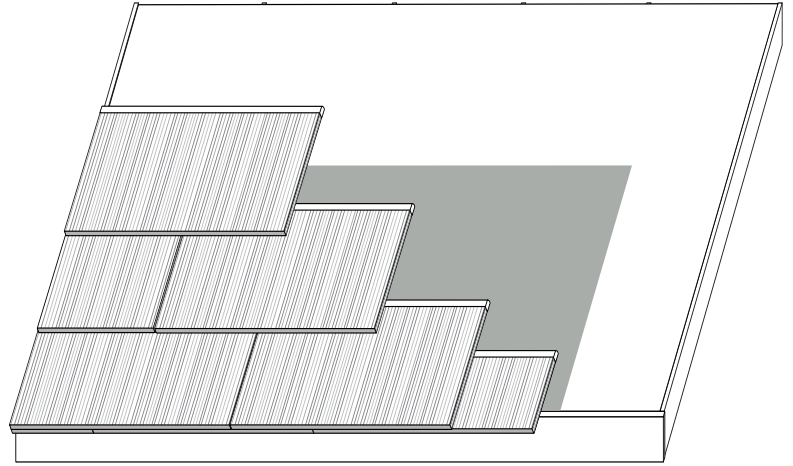

Hip Installation

- Thatch panels will bend around a hip.
- Cut with razor knife or saw (hacksaw, jigsaw, sawzall) with an 18 TPI blade.
- Use Sub-Panels cut in half to cover the hip line. Contact the manufacturer if assistance is required.
- Install our Zulu Reed™ Top Cone (sold separately) on any custom roof peak.

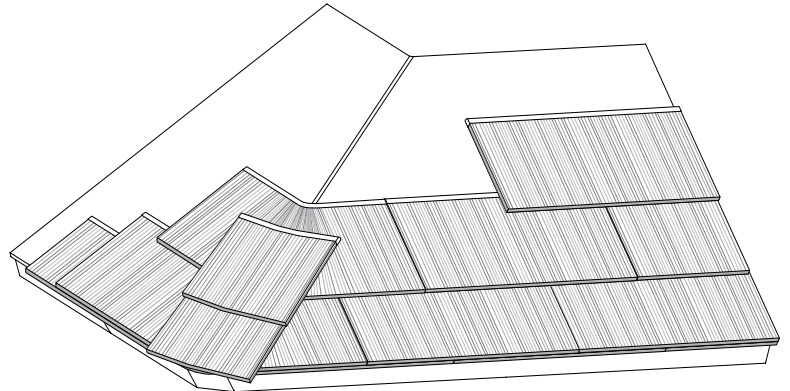

Valley Installation

- Cut thatch panels at proper angle to fit tightly into the valley.
- Cut with razor knife or saw (hacksaw, jigsaw, sawzall) with an 18 TPI blade.

