


Palapa Structures 5390 E Los Angeles Ave. Unit B Somis, CA 93066 Phone: (805) 386-0306 www.PalapaStructures.com

Easy Installation!

- Ideal for installation on all solid roof designs.
- Realistic, artificial palm thatch panels conform and adjust to any custom roof design.
- Install our Baja Palm™ Top Cone (sold separately) on any custom roof peak.

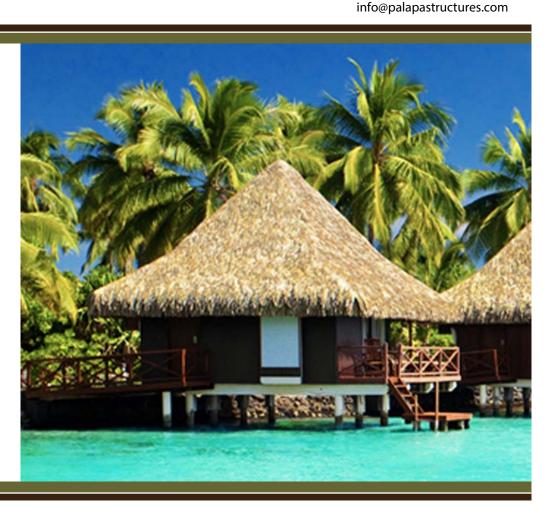

Baja Palm™ 3-Layer Thatch Sub-Panel

Specifications

• Length: 31"

• Height: 24"

• Coverage: 1.5 Sq. Ft.

• Center Installation: 7"

20 Year Limited Warranty

 Offered as both Class A fire rated and non-fire rated






Baja Palm™ 3-Layer Thatch Sub-Panel Installation Tips


Waterproof Installation

- On a solid roof, panels are not visible from underneath.
- Best to use 30 degree roof pitch.
- Use waterproof underlayment under panels.
- Attach with galvanized or stainless screws, roofing nails or pneumatic staples.
- Panels should have an overhang at the bottom or eave of 12-16".
- Cut with razor knife or saw (hacksaw, jigsaw, sawzall) with an 18 TPI blade.

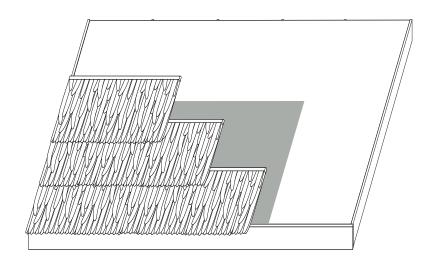

Hip Installation

- Thatch panels will bend around a hip.
- Cut with razor knife or saw (hacksaw, jigsaw, sawzall) with an 18 TPI blade.
- Use panels cut in half to cover the hip line. Contact the manufacturer if assistance is required.
- Install our Baja Palm[™] Top Cone (sold separately) on any custom roof peak.

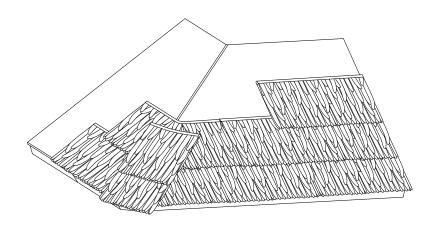

Valley Installation

- Cut thatch panels at proper angle to fit tightly into the valley.
- Cut with razor knife or saw (hacksaw, jigsaw, sawzall) with an 18 TPI blade.

